



Mr Bouncy Castle

Risk Assessment – Human Table Football

H = Harm, L = Likelihood, RR = Risk Rating (1-5)

Date: 10th Feb 2025

Hazard	Existing Control Measure	Further Control Measure to Reduce Risk	Risk Rating		
			H	L	RR
The area in which the castle is erected	1 meter clearing around the side	Check area for debris that can cause harm	1	2	2
Weather	Inflatables are not used if the weather is too wet. Maximum operating wind speed is 24 mph	Inflatables are anchored using 16mm x 380mm stakes. Staff are trained to anchor them into the ground with minimum protruding level and correct position.	3	1	2
Damage to equipment	Check equipment before use. Ensure the poles are securely fastened together and velcroed in place	Staff are trained to check the inflatables, ensure the zips are fully closed, the equipment isn't damaged and the fan is correctly secured to the tube	1	1	1
Participant Collision	Ensure the castle doesn't exceed the maximum number of users and participants stand in their allocated places	Supervise the castle and maintain control. Do not exceed 12 players (6 per team).	1	1	1



Mr Bouncy Castle

Trips	Stakes should not protrude more than 25mm above ground level	Ensure the electric cables don't cross over any pathways. Mats to be used at entrance and exits.	2	3	3
Boisterous Behaviour	Adult supervision in place. Prevent users showing boisterous behaviour from using the castle	Do not let anyone under the influence use the inflatable	1	1	1
Choking	Ensure no food or drink is taking on to the playing field	Do not allow chewing gum	3	1	2
Injury from overcrowding	Ensure an adult is there to supervise	At large events, have extra staff members to maintain control	3	1	2
Users getting hit by balls	Use a soft foam football	Adult supervision	1	5	3
Injury through lack of inflatable pressure	Do not allow anyone on or near the inflatable during inflation and deflation	Equipment is checked regularly for damage. Staff are trained to secure the inflation pipe securely to the fan.	4	1	3
Risk of fire from the Petrol Fan or Generator	Petrol Fans and Generators are fenced off and filled with fuel to limit re-fueling.	Spare fuel is always stored safely in a 'fit for purpose' Jerry can. Always ensure the castle is switched off for re-fueling.	2	1	2